


NST 2026


Conditioner:

Cleaner:

Zone Configuration

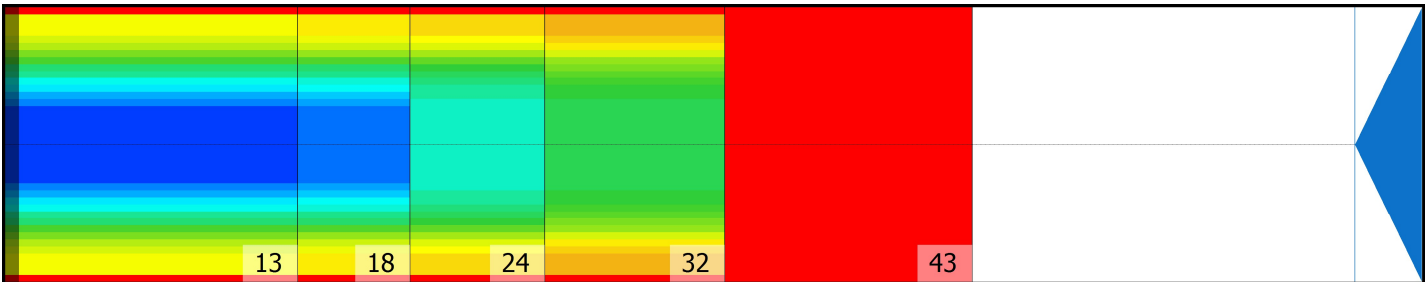

Cleaner Transition

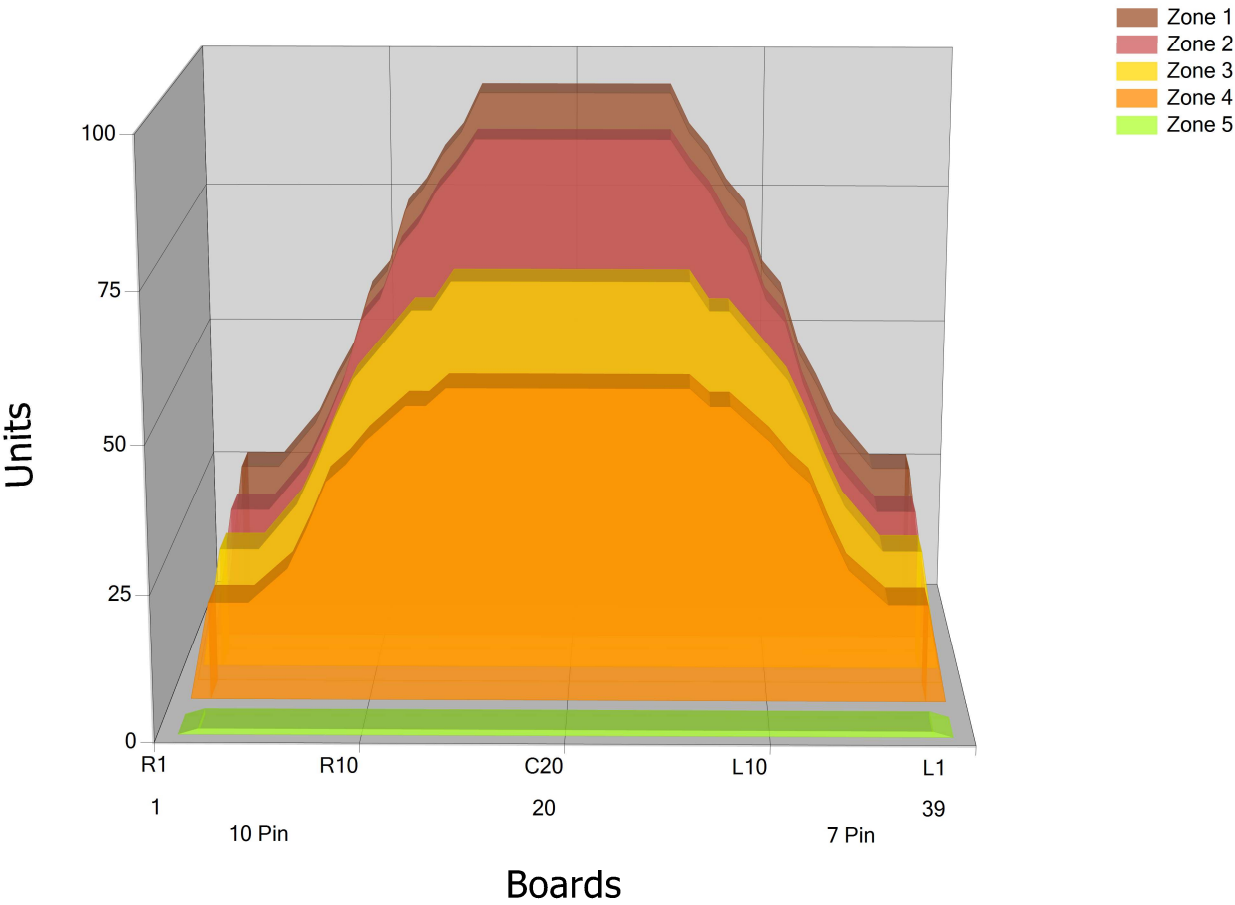

Volume: 27.36

Mode: Clean and Condition

Speed: Max Clean

Start Cleaner Spray: 0 Feet

Start Squeegee: 0 Feet

Start Conditioning: 6 Inches

Split Pattern: No

Zone 1	Avg	Ratio	Zone 2	Avg	Ratio	Zone 3	Avg	Ratio	Zone 4	Avg	Ratio
Left	31.40	2.99 : 1	Left	28.40	3.13 : 1	Left	26.40	2.58 : 1	Left	21.40	2.52 : 1
Right	31.40	2.99 : 1	Right	28.40	3.13 : 1	Right	26.40	2.58 : 1	Right	21.40	2.52 : 1
Center	94.00		Center	89.00		Center	68.00		Center	54.00	

Zone 5	Avg	Ratio
Left	1.00	1.00 : 1
Right	1.00	1.00 : 1
Center	1.00	

